


Instructions on Installing the Sliding holder

3


Then put the Sliding holder
onto the tube

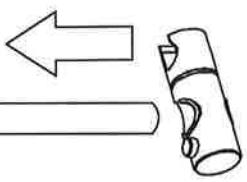

Remove the nut


2

Use the inner hexagon
wrench to turn the nut
at the bottom of the tube

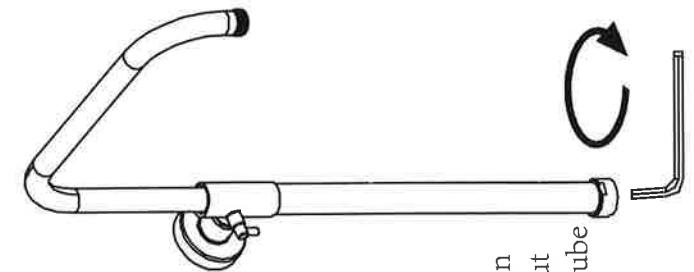

5


Use appropriate strength
to lock the nut, do not
use brute force to
lock the nut,
which may damage
the thread and sealing
to cause water leakage

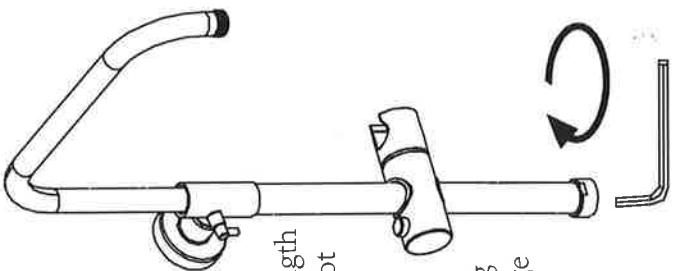

1



4

The sliding holder has
been installed,
and the next step is to
install the nut

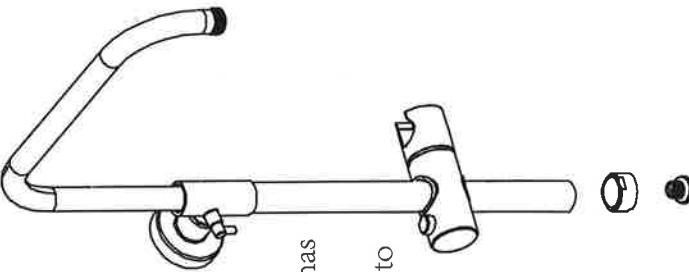

1


Use the inner hexagon wrench to turn the nut at the bottom of the tube

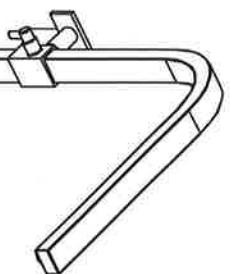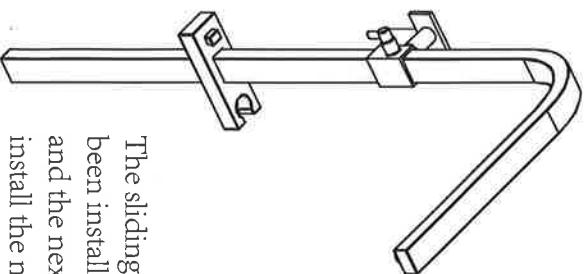


2

Remove the nut

Then put the Sliding holder onto the tube

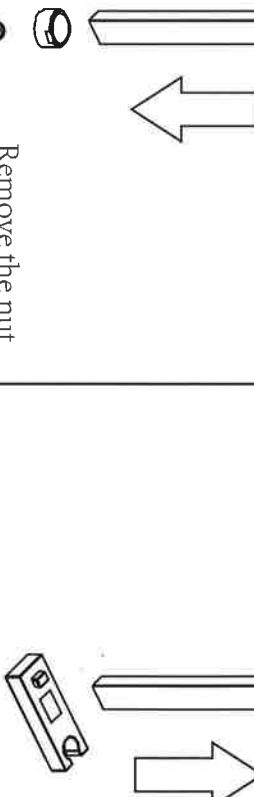

3

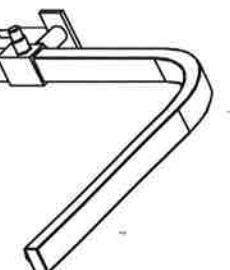

4

The sliding holder has been installed, and the next step is to install the nut

Instructions on Installing the Sliding holder

Use appropriate strength to lock the nut, do not use brute force to lock the nut,

which may damage the thread and sealing to cause water leakage



Note

