

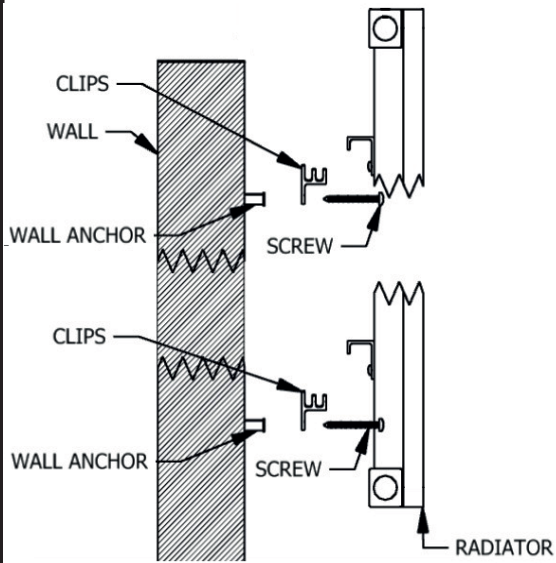


CASINA (for 5 and 7 tubes) INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

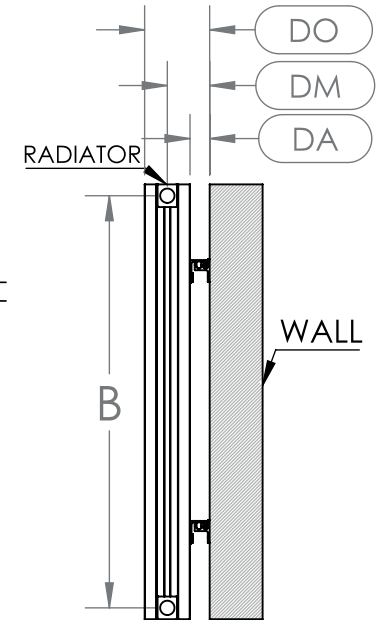


CLIPS 2 PCS	
WALL ANCHORS 4 PCS	
FIXING SCREWS 4 PCS	
CAP 2 PCS	
END PLUG 1 PCS	
AIR VENT 1 PCS	
RUBBER 2 PCS	

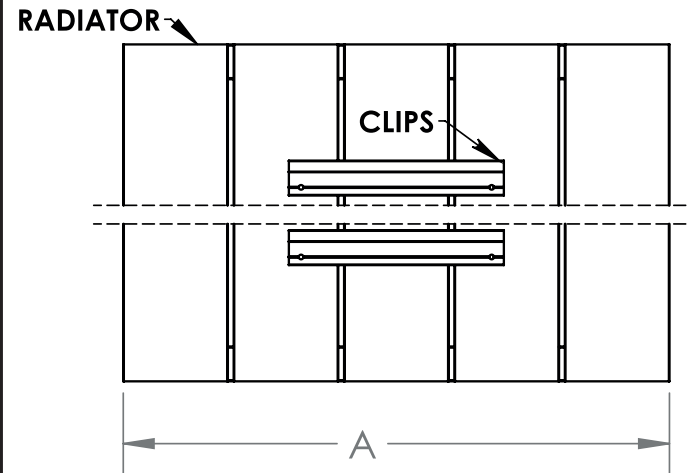

This picture represents behind look of a double type radiator with 5 tubes.

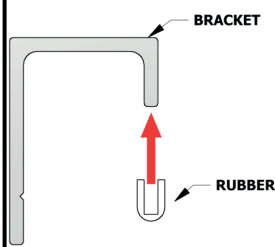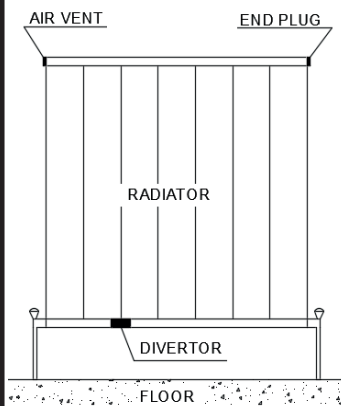

Use the Rubber !

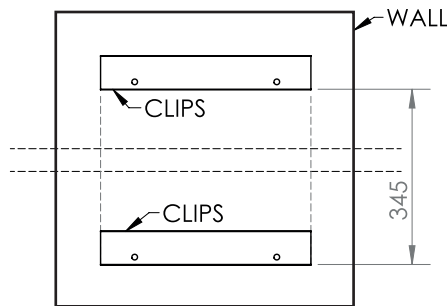

The installation guide for wall clips


NAMES		A	B	TUBE QTY	DA	DM	DO
CASINA (SINGLE)	600	470	545	5	22	35	65
CASINA (SINGLE)	600	660	545	7	22	35	65
CASINA (DOUBLE)	600	470	545	5	26	56	86
CASINA (DOUBLE)	600	660	545	7	26	56	86

GENERAL RECOMMENDATION


- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb onthe radiator.
- Maximum working temperature 95C, maximum working pressure 4 bar.

CASINA (for 9,11,13,15 tubes) INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

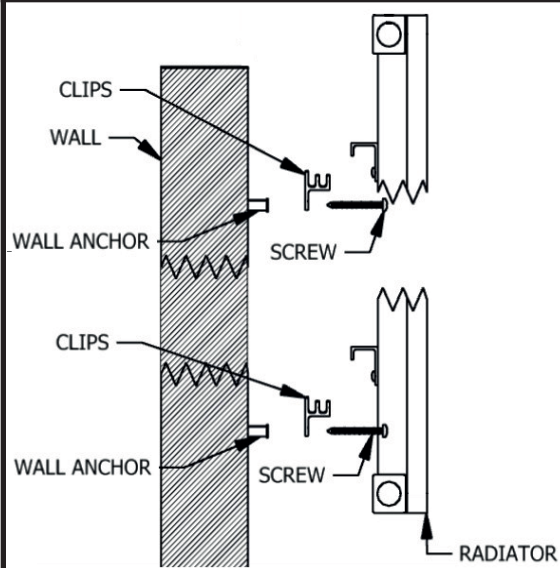


CLIPS 3 PCS	
WALL ANCHORS 6 PCS	
FIXING SCREWS 6 PCS	
CAP 2 PCS	
END PLUG 1 PCS	
AIR VENT 1 PCS	
RUBBER 3 PCS	

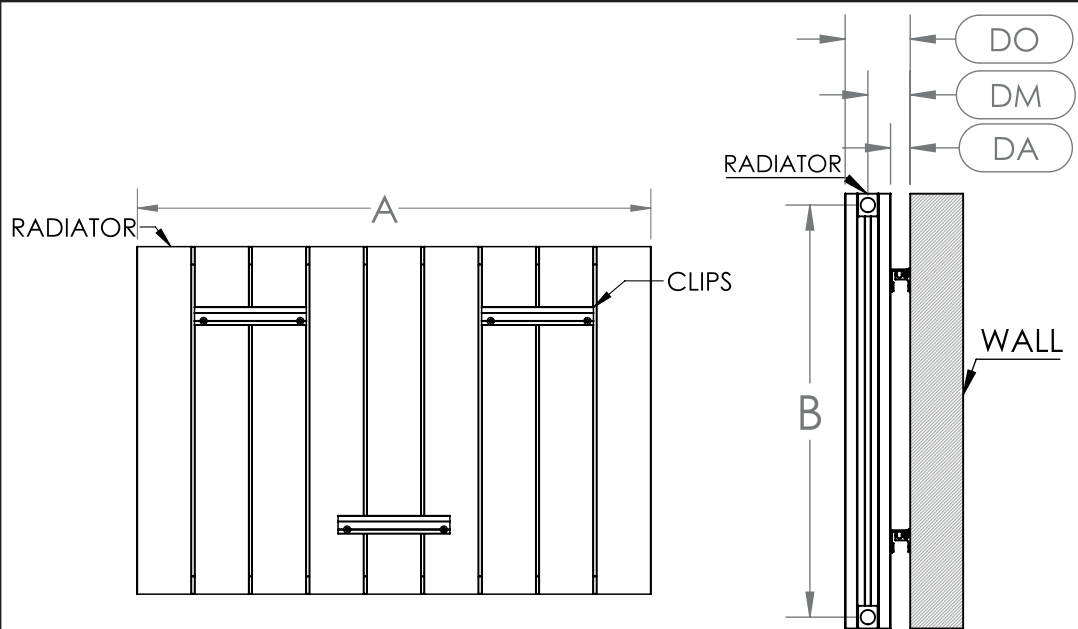

This picture represents behind look of a double type radiator with 9 tubes.

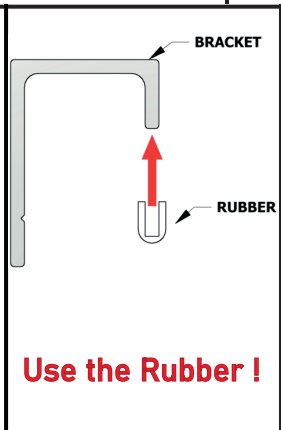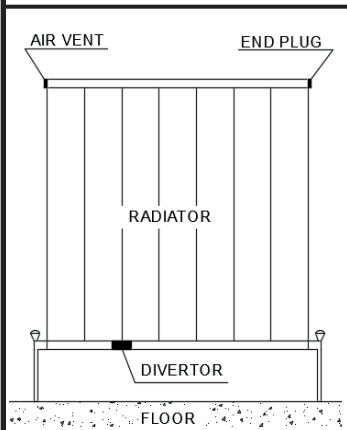

Use the Rubber !

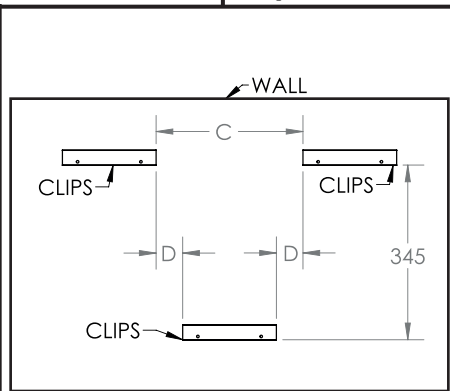

The installation guide for wall clips.

NAMES		A	B	C	D	TUBE QTY	DA	DM	DO
CASINA (SINGLE)	600	850	545	290	50	9	22	35	65
CASINA (SINGLE)	600	1040	545	480	150	11	22	35	65
CASINA (SINGLE)	600	1230	545	670	240	13	22	35	65
CASINA (SINGLE)	600	1420	545	860	335	15	22	35	65
CASINA (DOUBLE)	600	850	545	290	50	9	26	56	86
CASINA (DOUBLE)	600	1040	545	480	150	11	26	56	86
CASINA (DOUBLE)	600	1230	545	670	240	13	26	56	86
CASINA (DOUBLE)	600	1420	545	860	335	15	26	56	86

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.