


INSTALLATION OF 2 IN 1 WC & BASIN



Step 1: Place and fix the waste and washer.



Step 2: Fit the Silicone sleeve on the bottom of the waste.

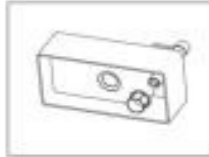

Step 3: Place the top and tightly screw the fixing nut.



Step 4: Connect hot & cold water hose to the tap and connect the other end to outlet of the valves.



INSTALLATION OF WASH BASIN



Note: During installation, please ensure there is enough distance between the front of the inlet valve and the hoses, make sure there is no resistance to the normal operation of the inlet valve.

Combi De-luxe



POT955CM

Basin waste installation instruction



1. Fixed with one of flex pipe

2. Fixed for 2nd pipe with the filter and top at the bottom

3. Tighten the top and back nut



4. Tighten the cover

5. Finished



1. Fixed the filter first and put in the hole

2. Fixed another filter at the bottom

3. Tighten the nut and finished